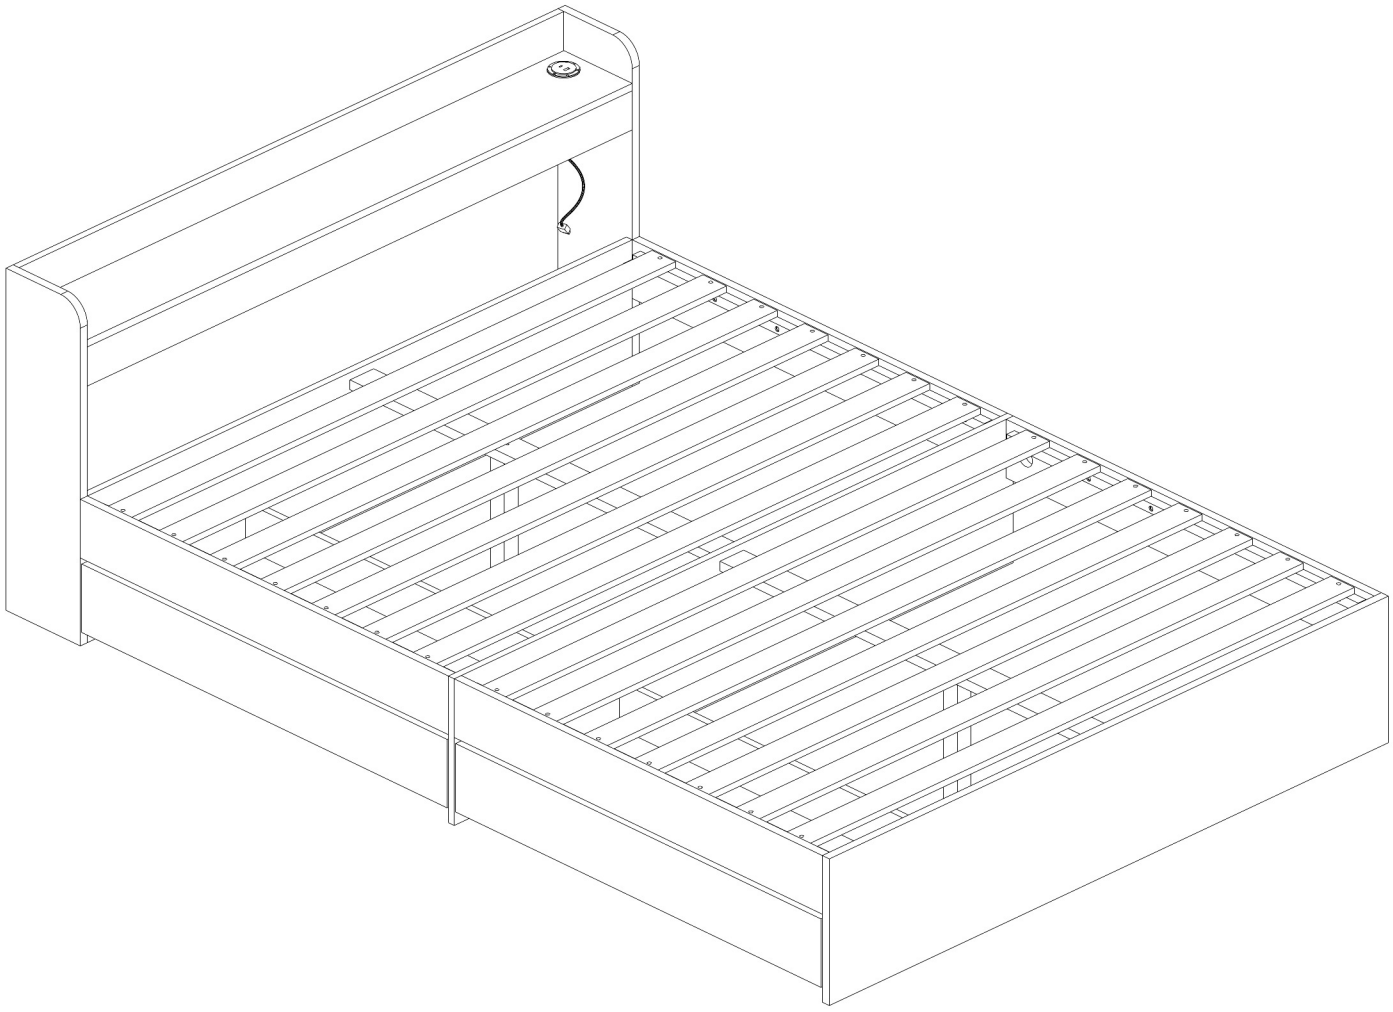
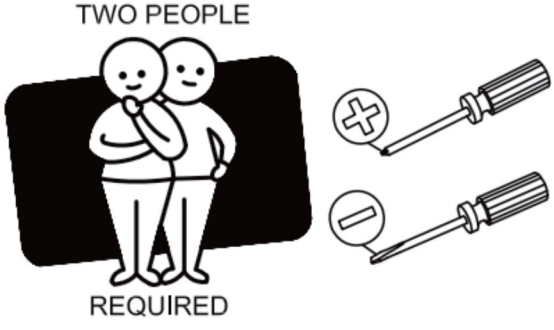
ARTISS®

MODEL : WBED-F-AURA-Q
Version : 1.2
Queen Bed Frame





Assembly checklist



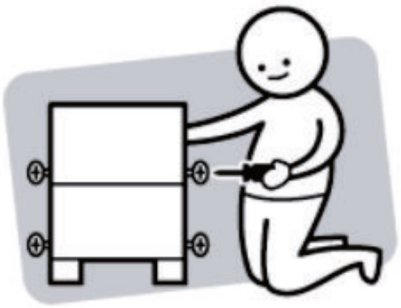
Read through the instructions carefully before you begin.



Make sure you have all the required tools. Do not use power tools.



Identify and lay out all of the components before you begin assembly.



Do not fully tighten all screws until step/ precess finished.

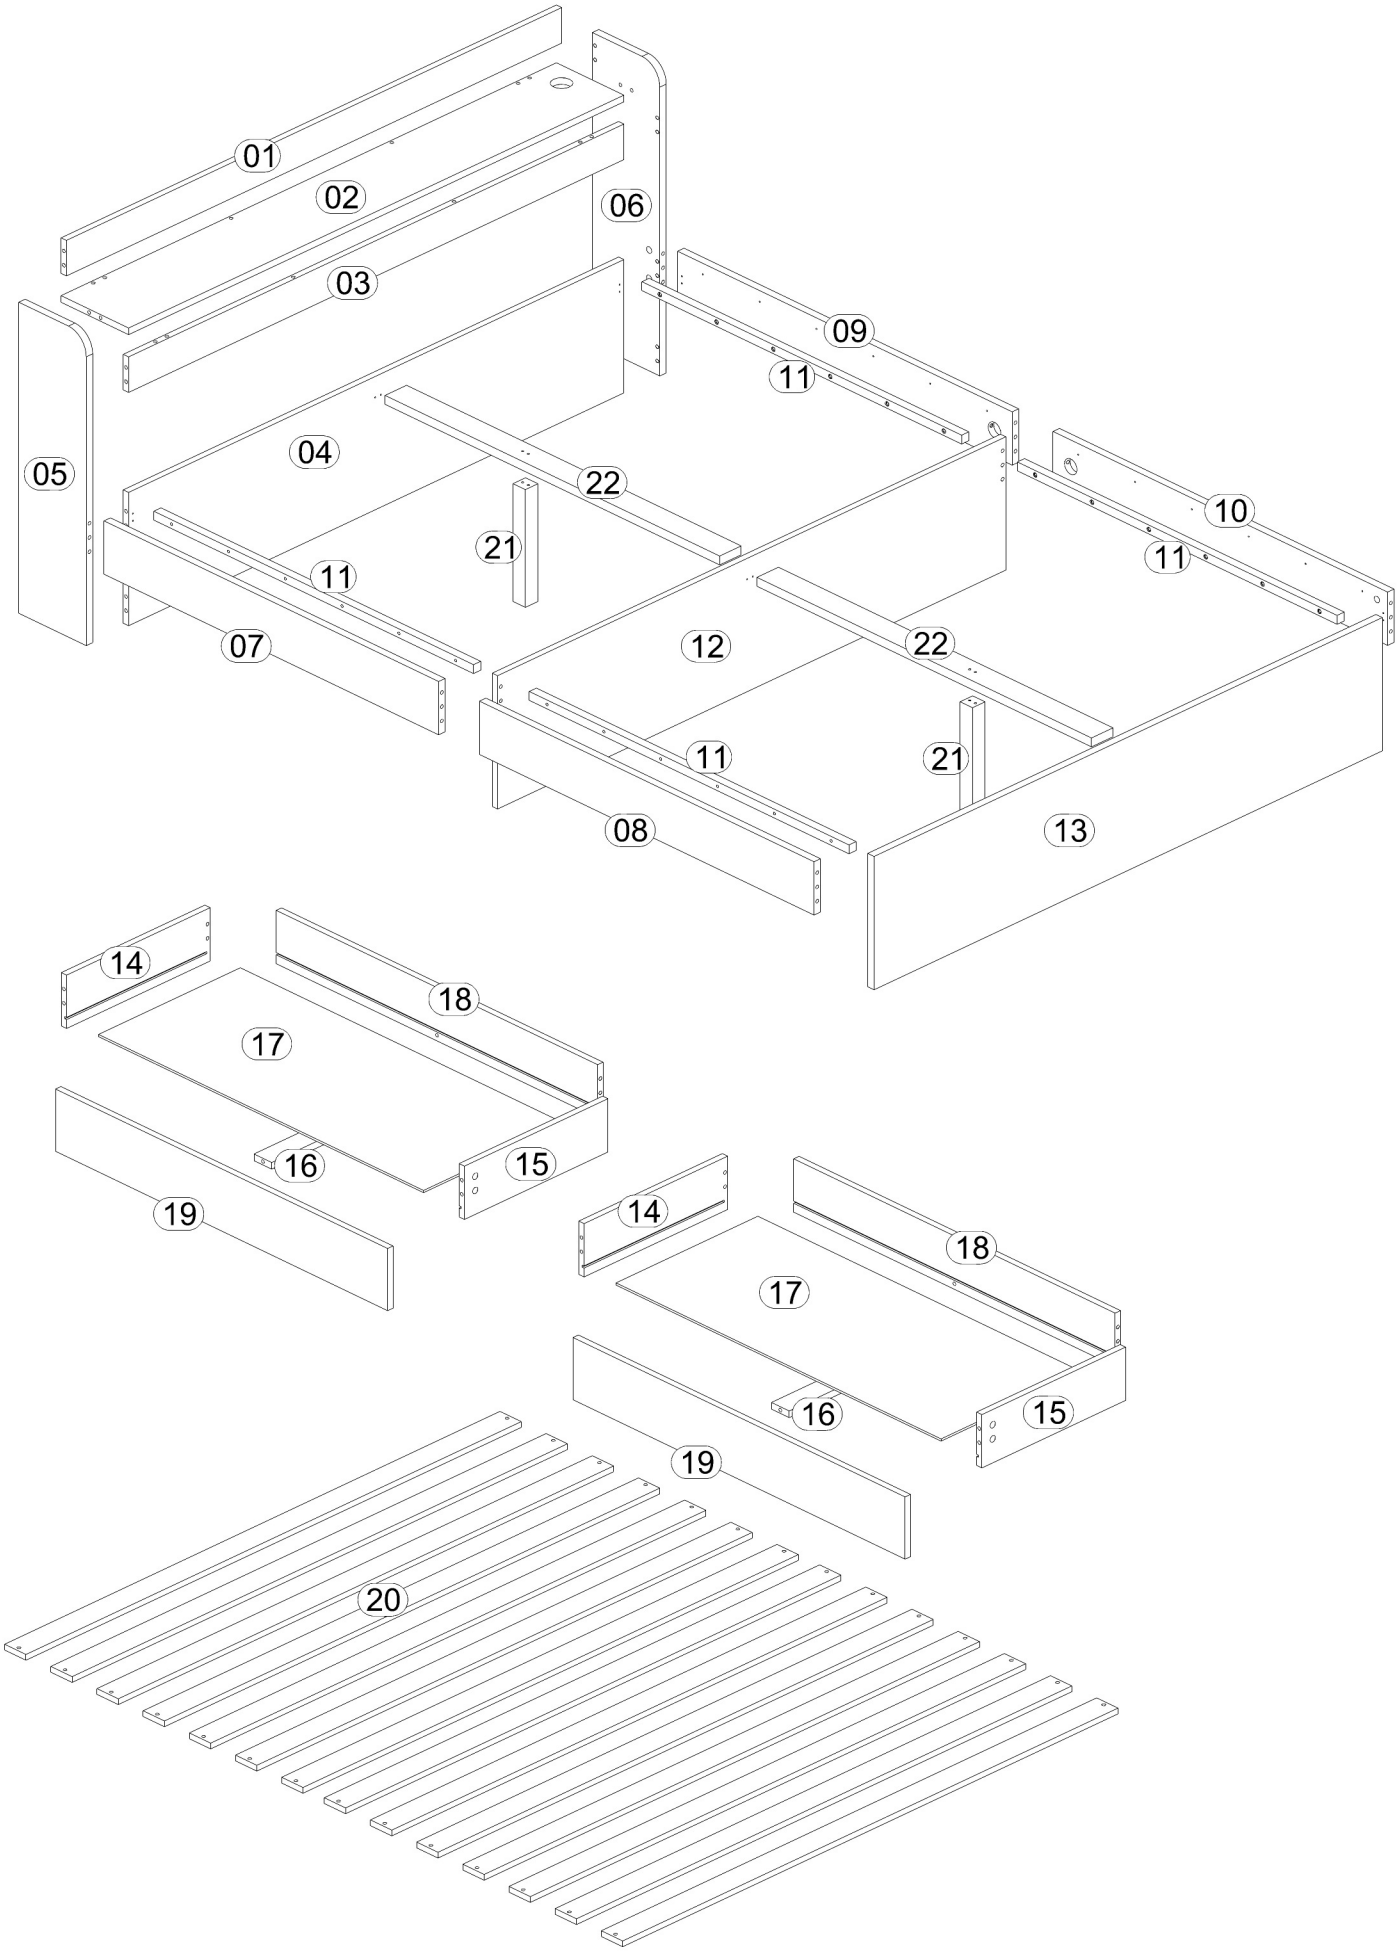
Useful Information

! Never use power tools, they can damage your components or hardware if used incorrectly.
















! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.

! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.




! Never use any glue until you are certain that the parts belong together.


01
02
03
04
05
06
07
08
09
10
11
12
13
14
15
16
17
18
19
20
21
22

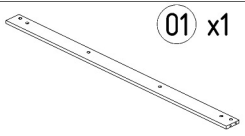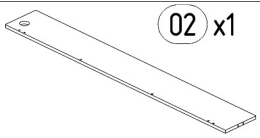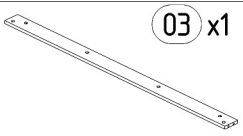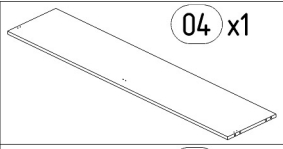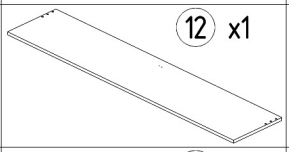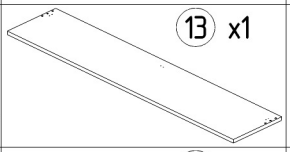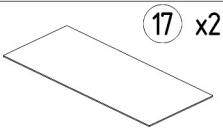
Parts List

01 x1 	02 x1 	03 x1 	04 x1 	05 x1 
06 x1 	07 x1 	08 x1 	09 x1 	10 x1 
11 x4 	12 x1 	13 x1 	14 x2 	15 x2 
16 x2 	17 x2 	18 x2 	19 x2 	20 x1 
21 x2 	22 x2 			

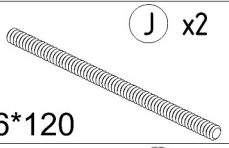Hardwares List


A 44+2 	B x44+2 	C x20+2  Ø8*40	D x48+2  Ø3.5*14	E x52+2  Ø3.5*30
F x4  Ø3.5*40	G x4 	H x4+1  M6	J x2  M6*120	K x2 
L x12  32*24	M x8 	N x4  Ø8*60	P x1 	Q x16+2  Ø3.0*12

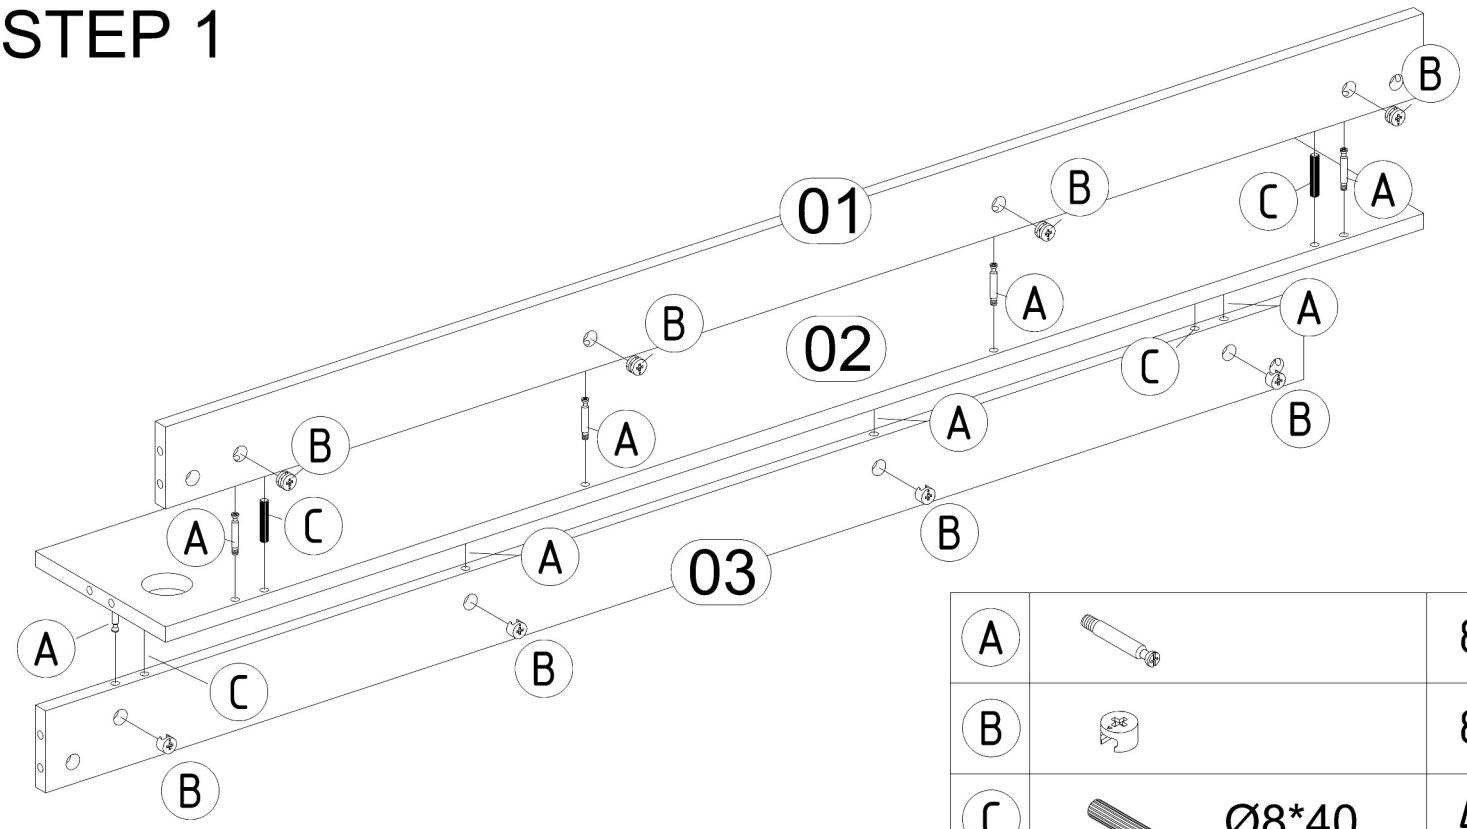STEP 1




A		8
B		8
C	Ø8*40	4

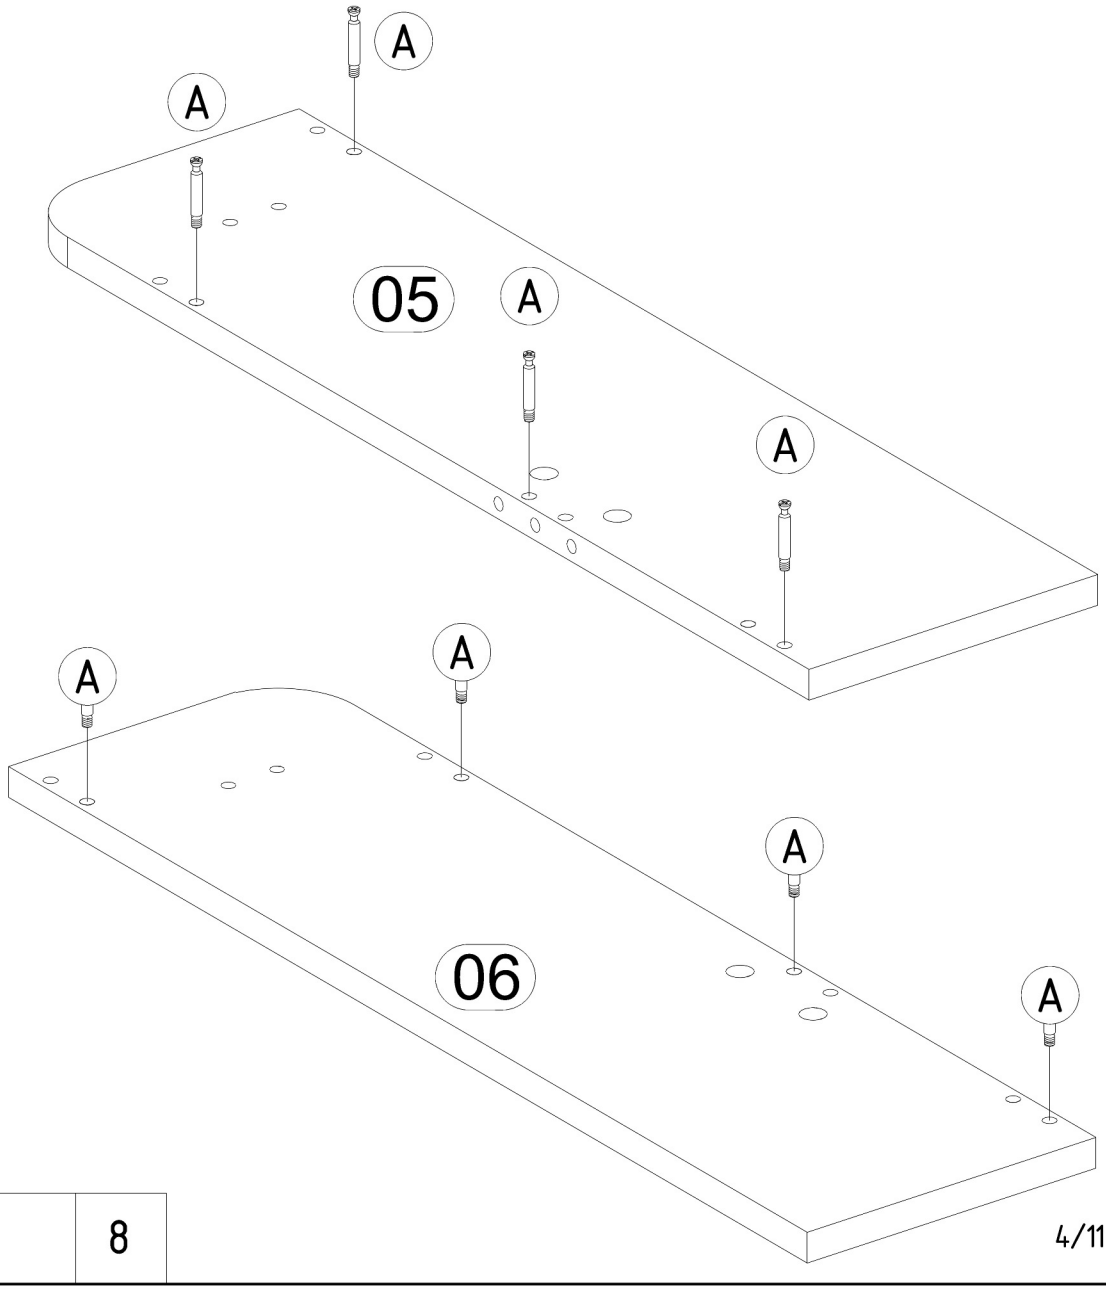STEP 2




A		8

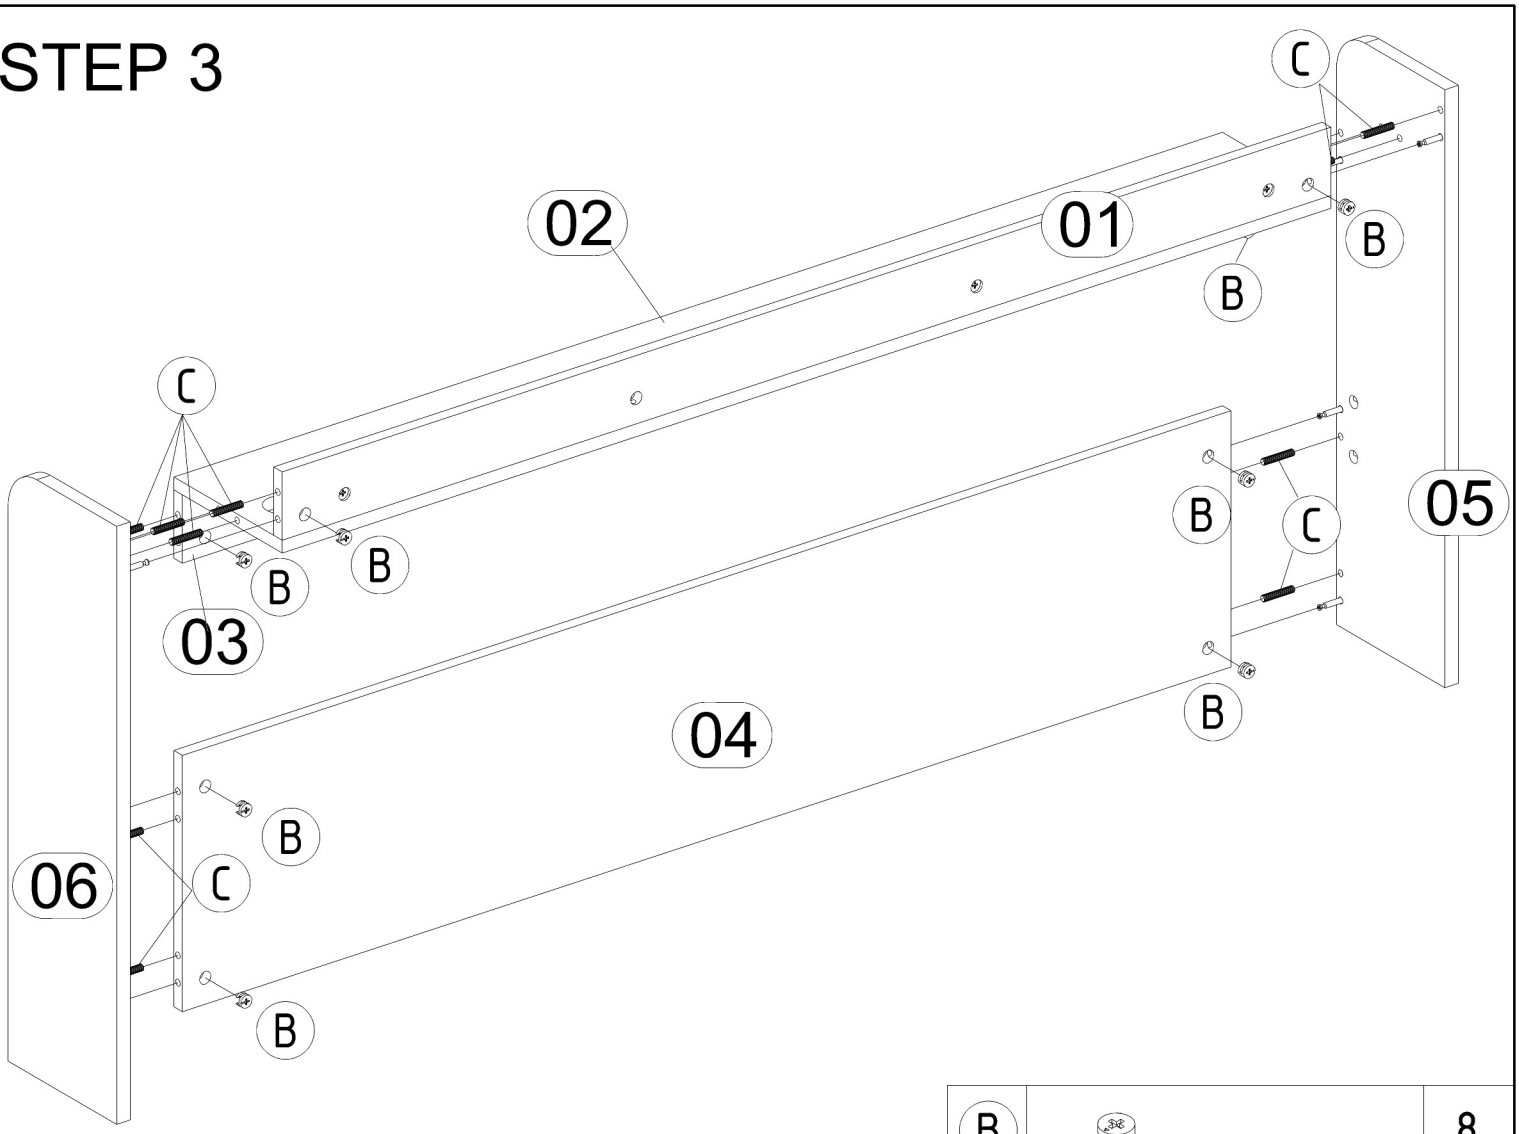STEP 3




B		8
C	Ø8*40	12

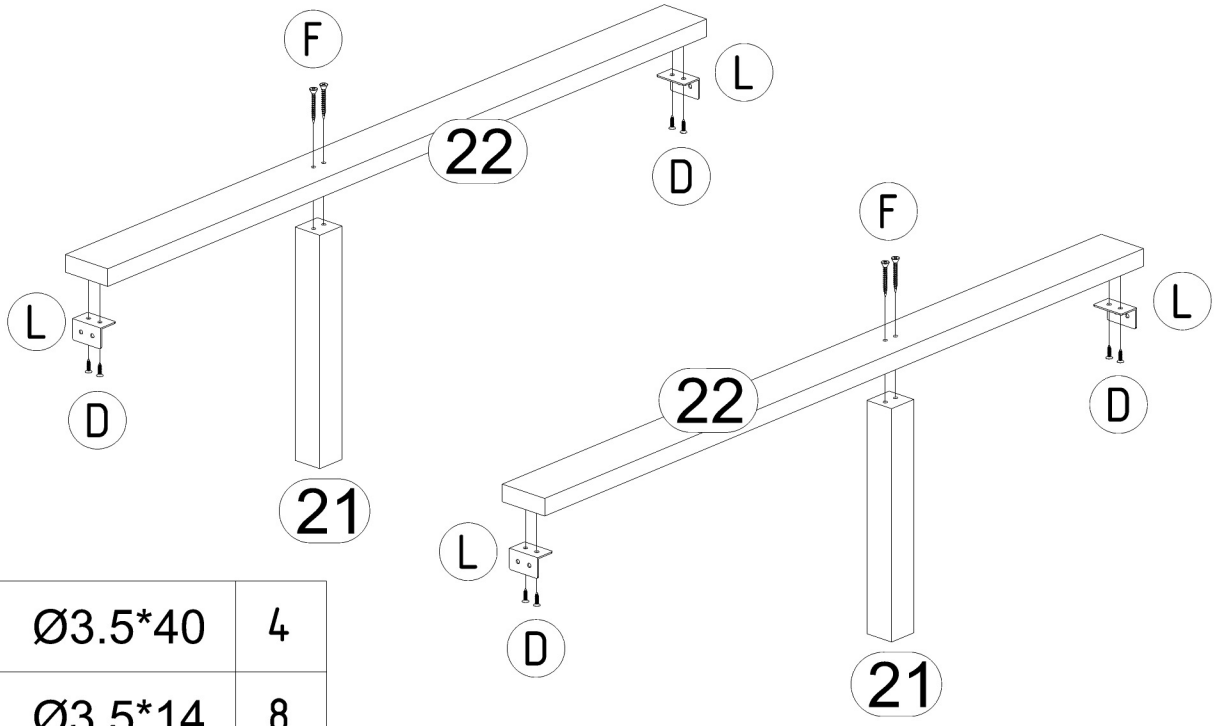STEP 4




F	Ø3.5*40	4
D	Ø3.5*14	8
L		4

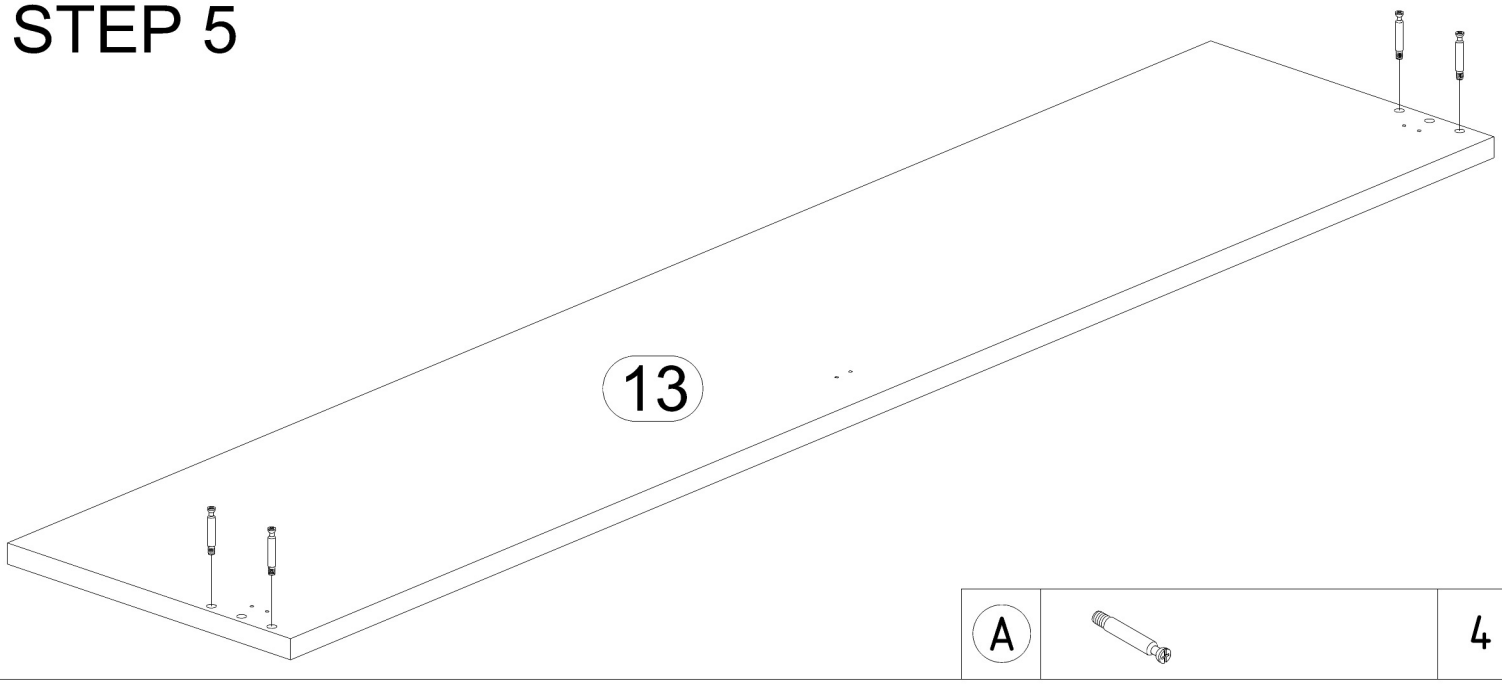
STEP 5



A		4

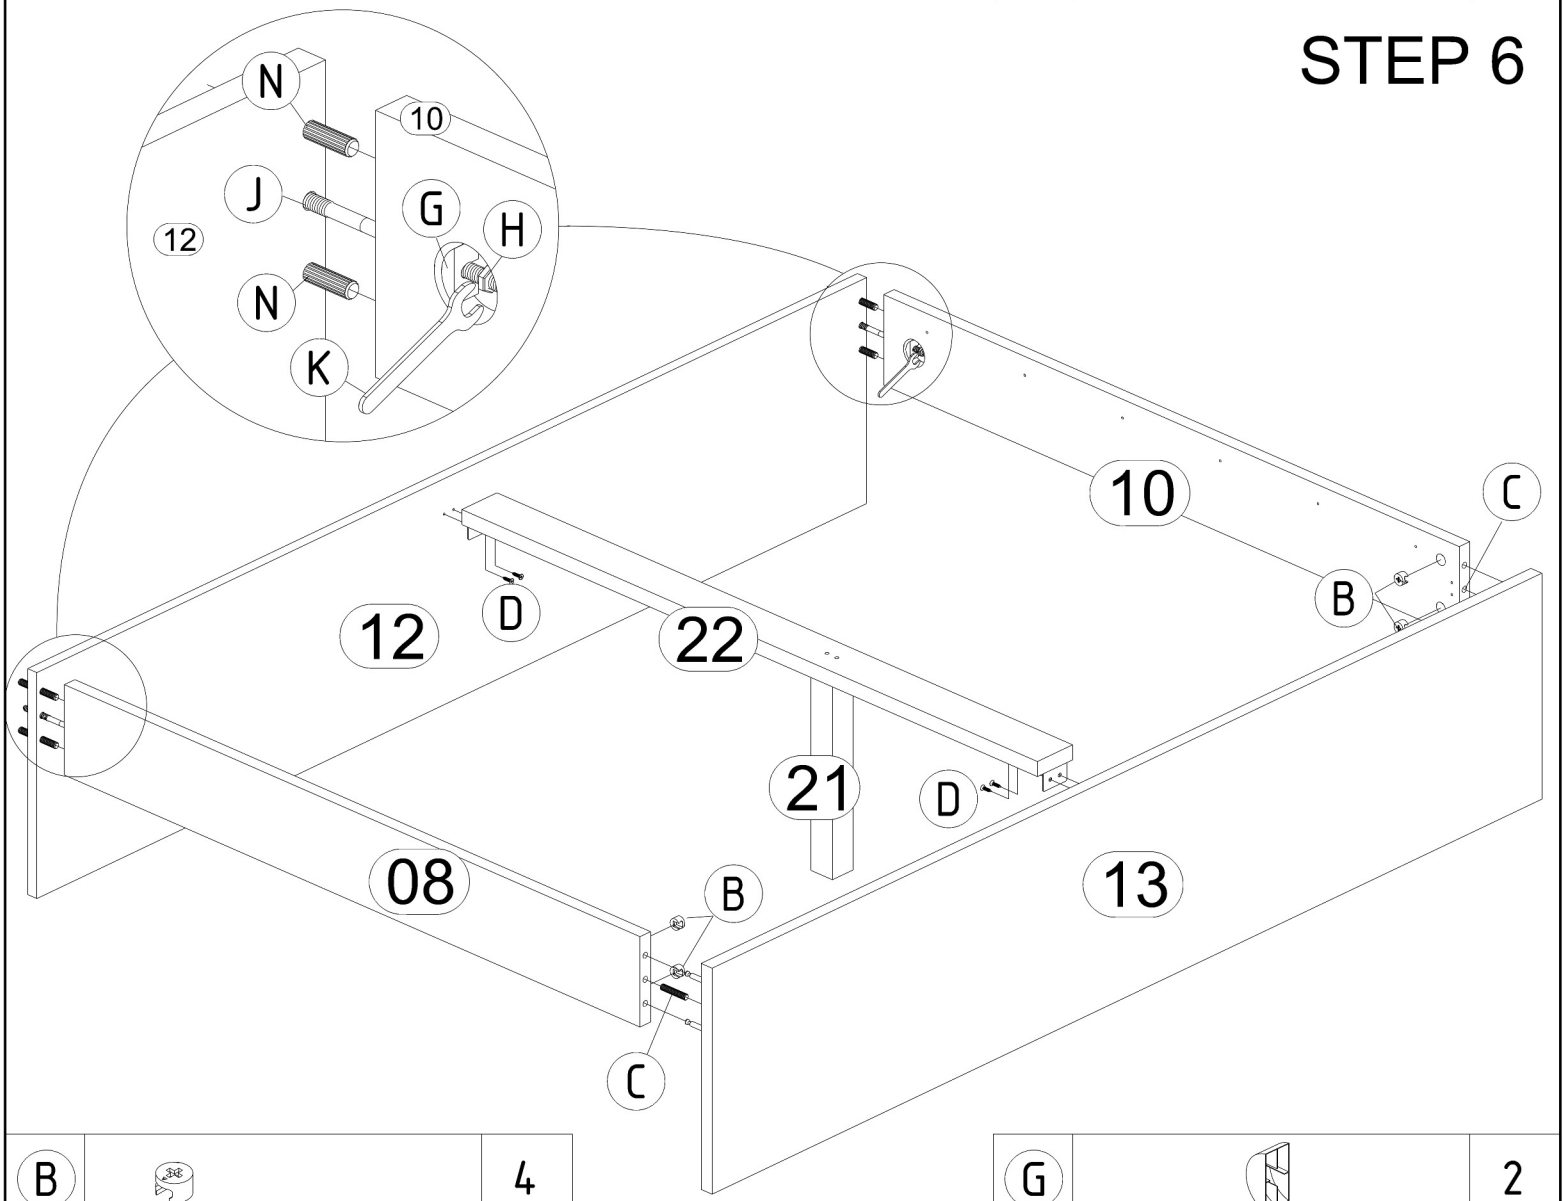STEP 6




B			4
C		Ø8*40	2
D		Ø3.5*14	4
N		Ø8*60	4


G			2
H		M6	2
J		M6*120	2
K			2

STEP 7

D	Ø3.5*14	2
G		2
H	M6	2

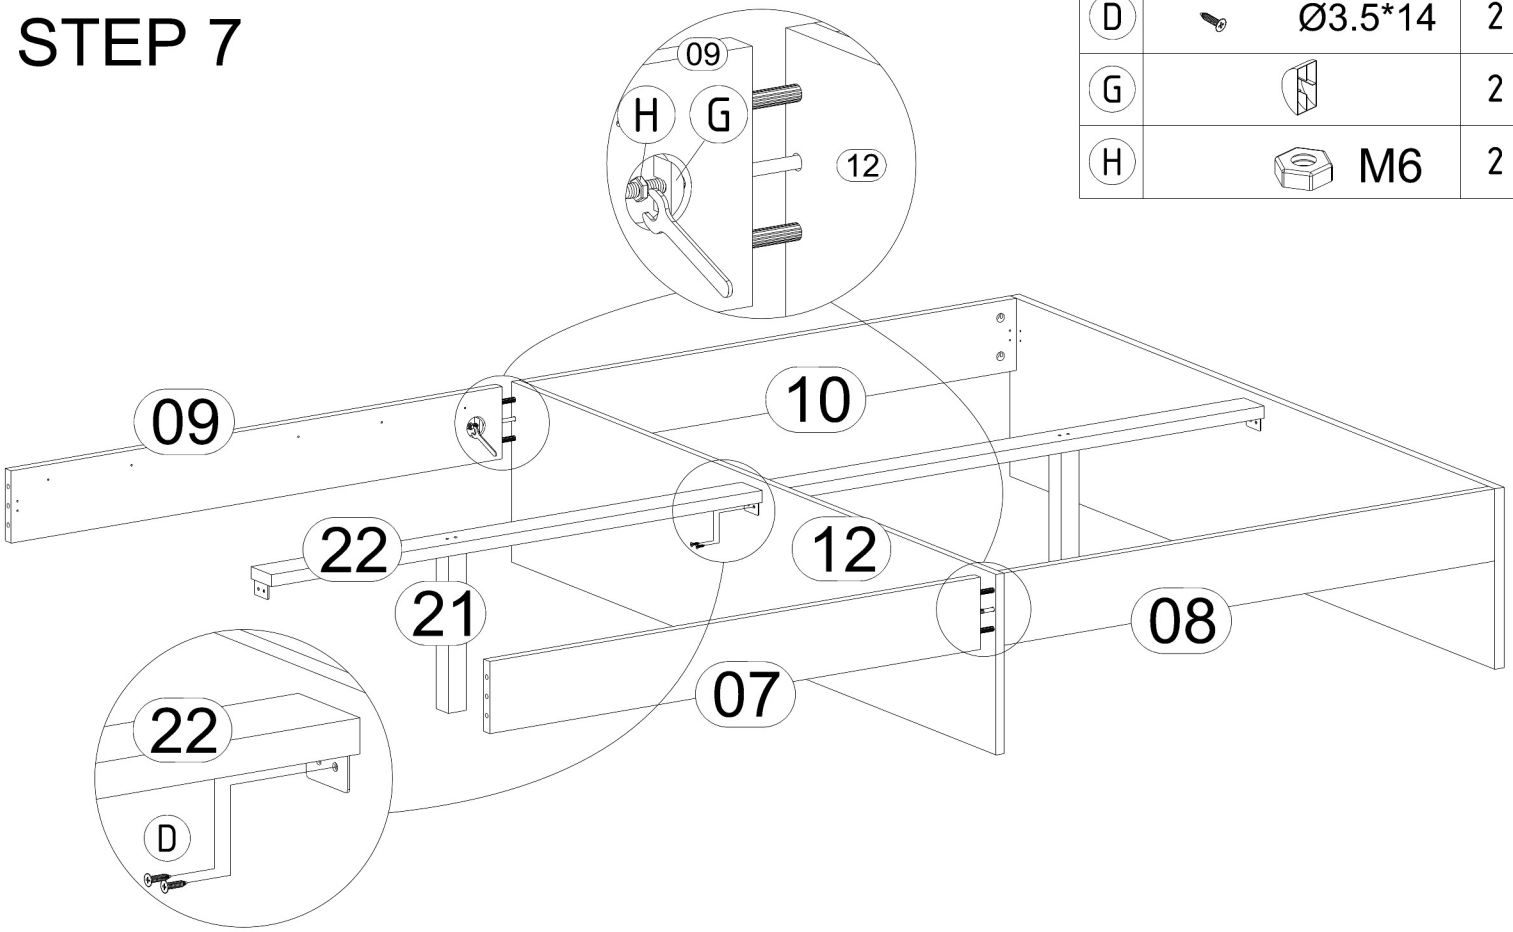


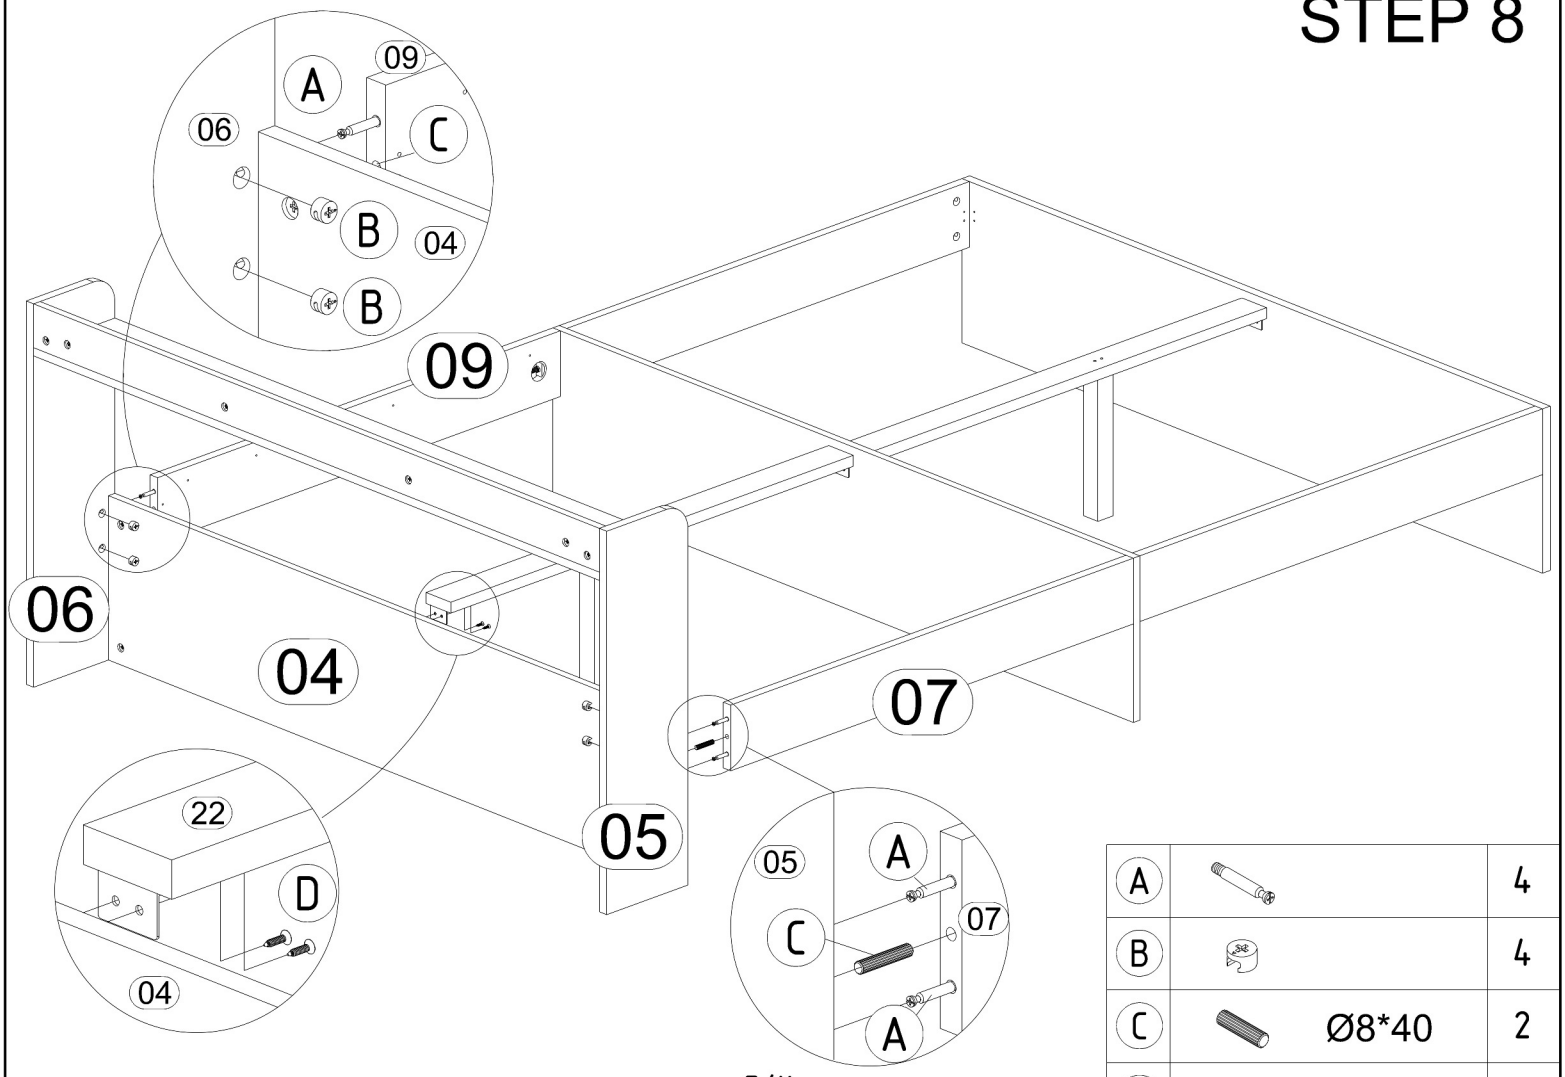STEP 8




A		4
B		4
C	Ø8*40	2
D	Ø3.5*14	2

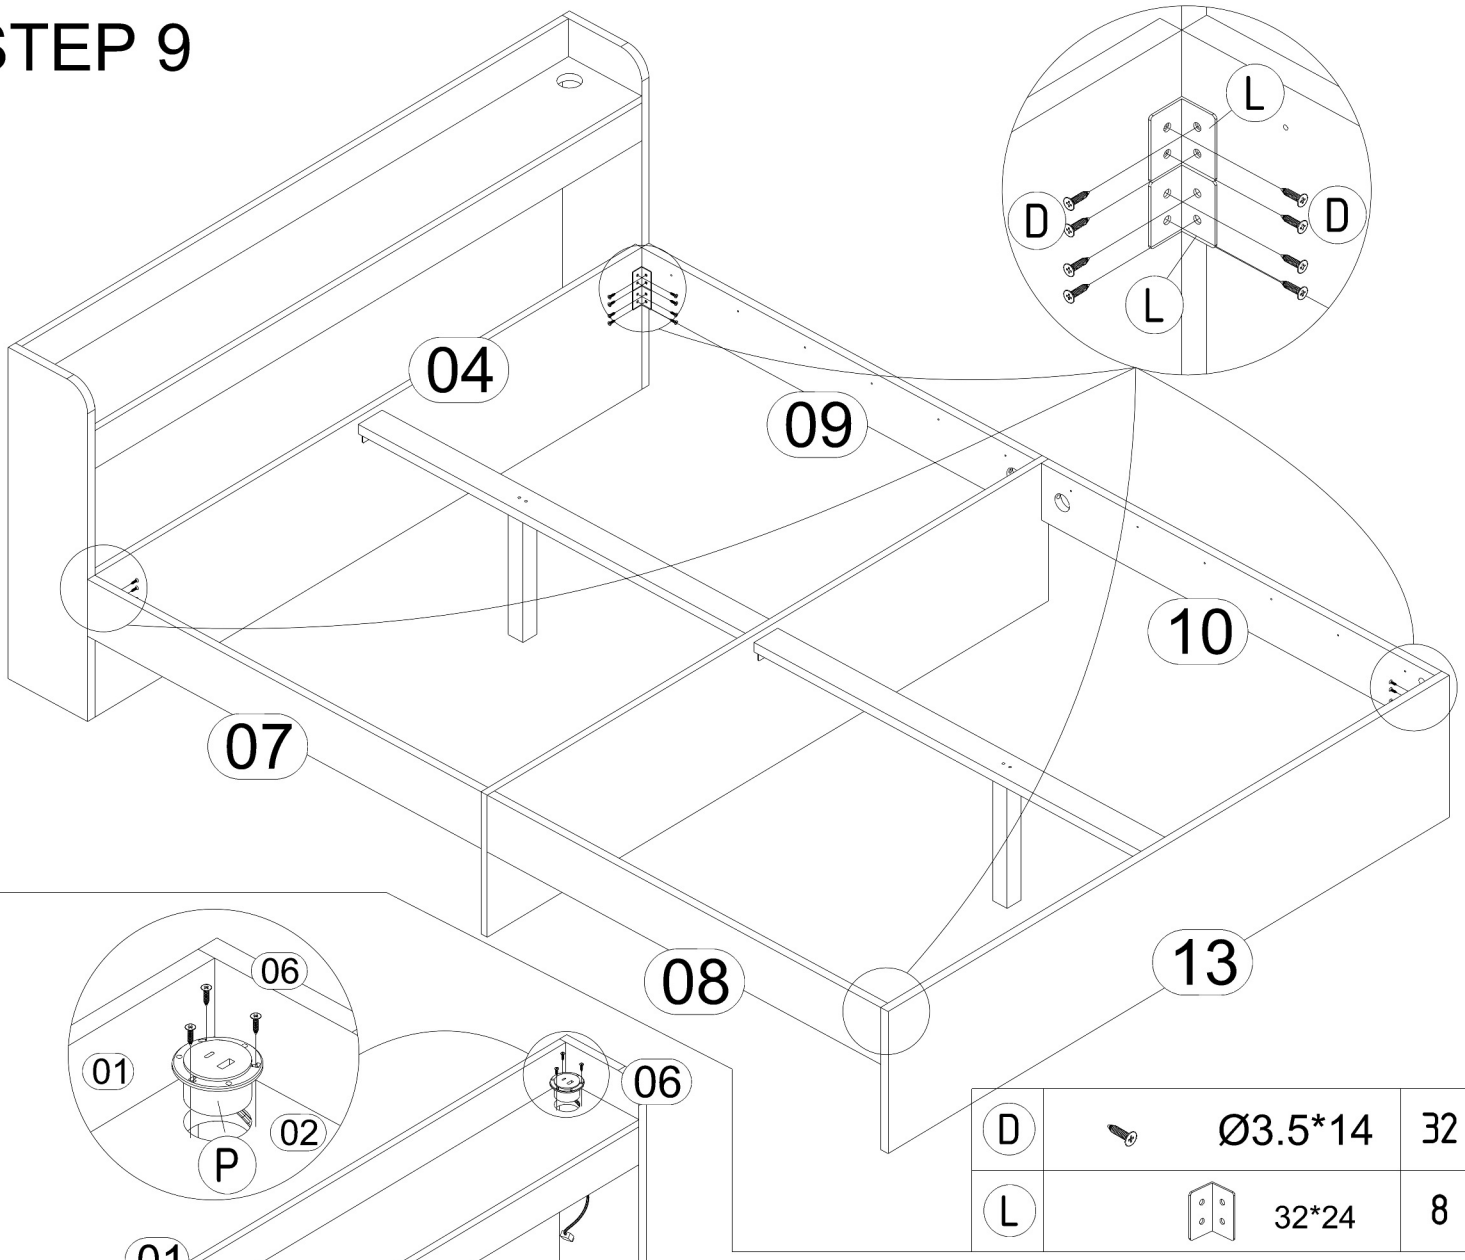STEP 9



D	Ø3.5*14	32
L	32*24	8

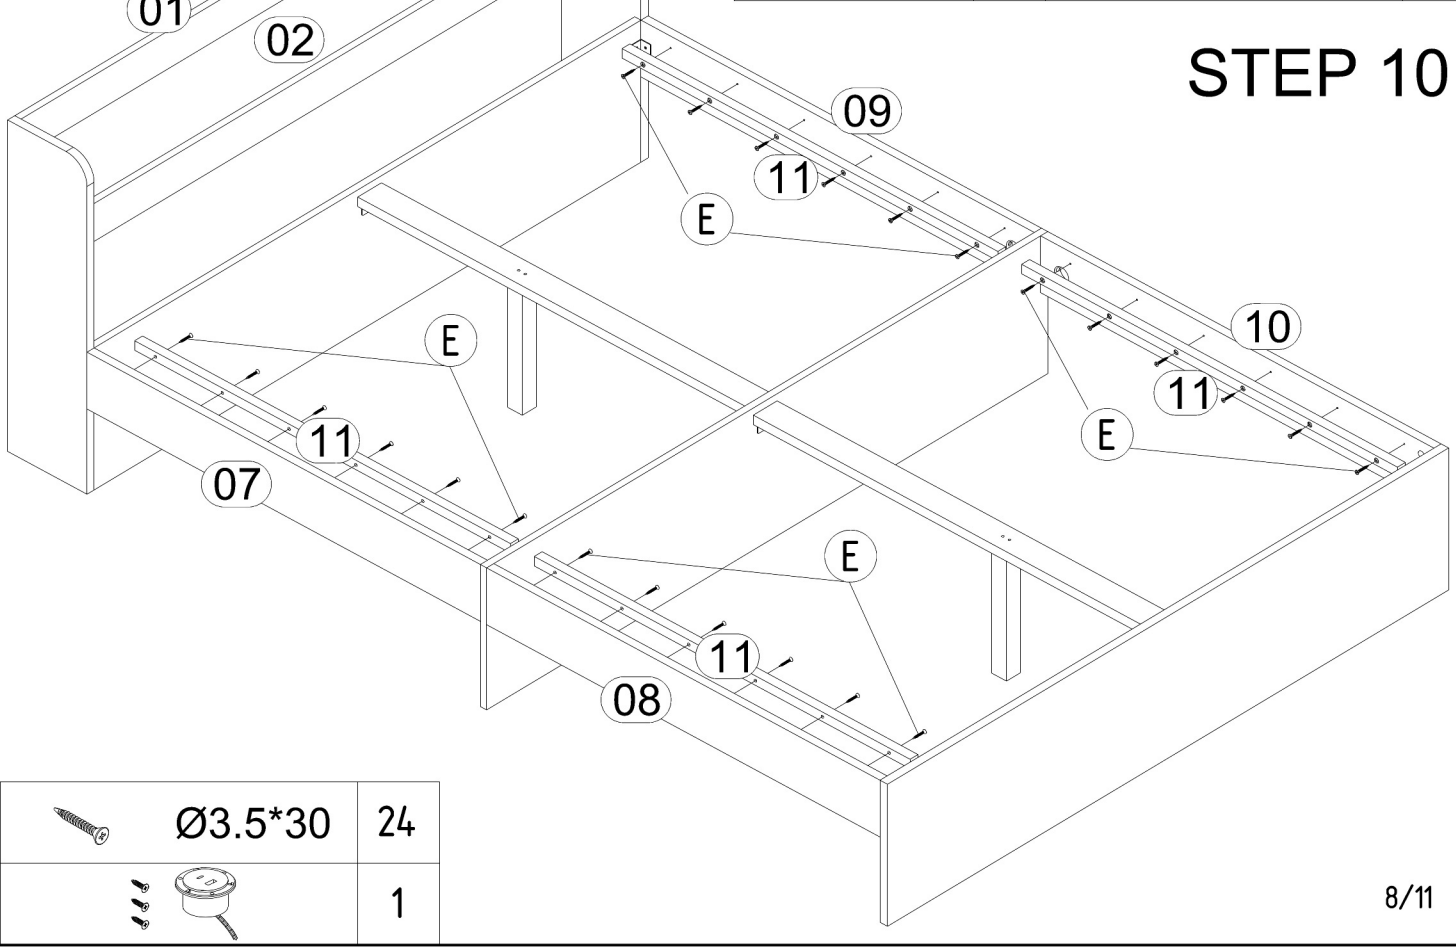
STEP 10



E	Ø3.5*30	24
P		1


STEP 11

E	Ø3.5*30	28

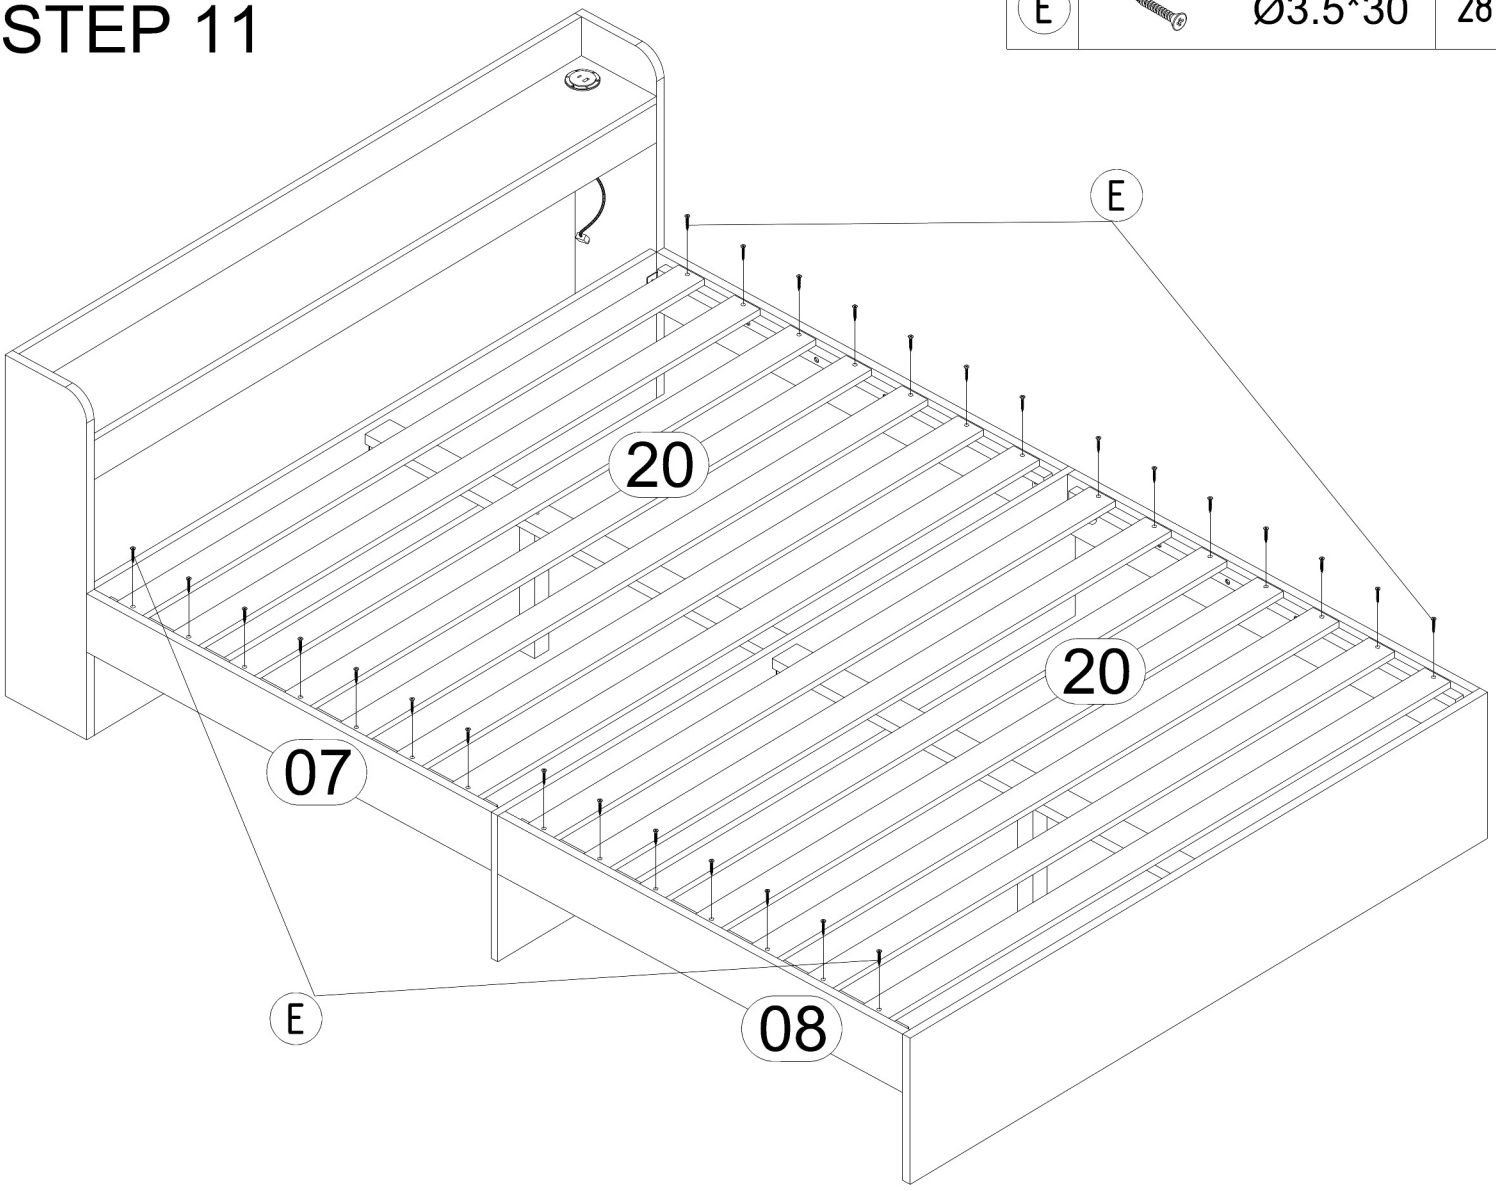


STEP 12

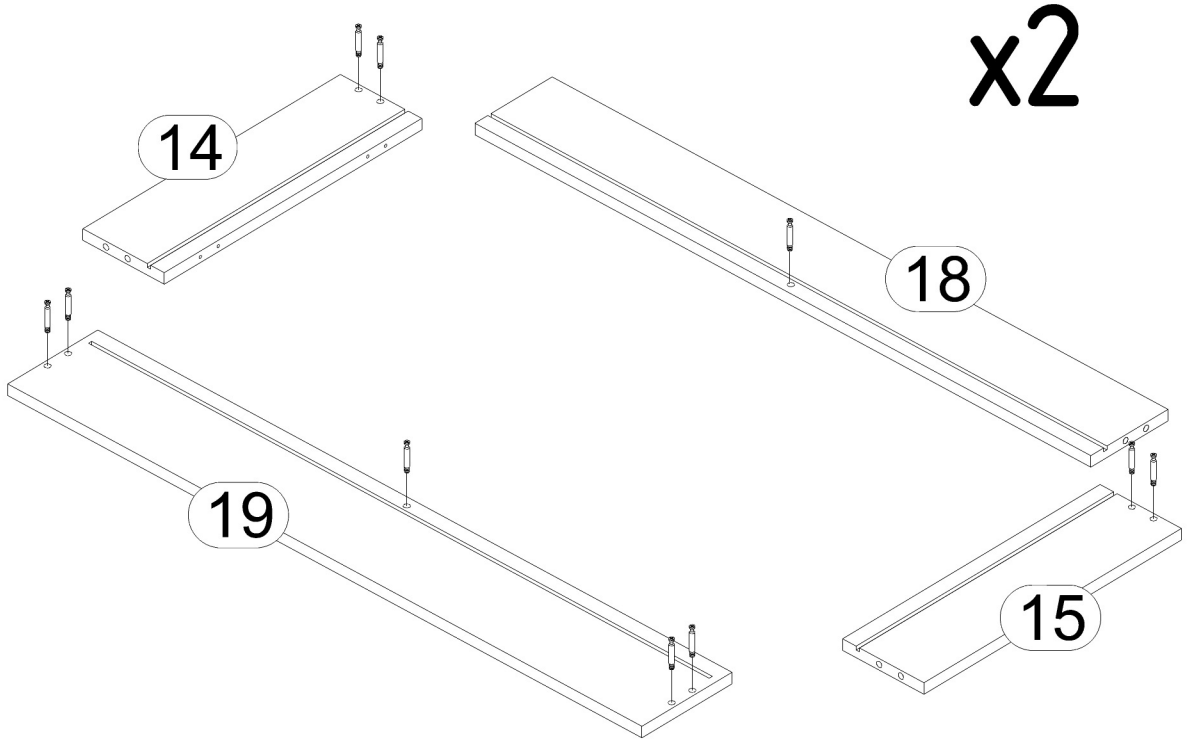x2




A		20

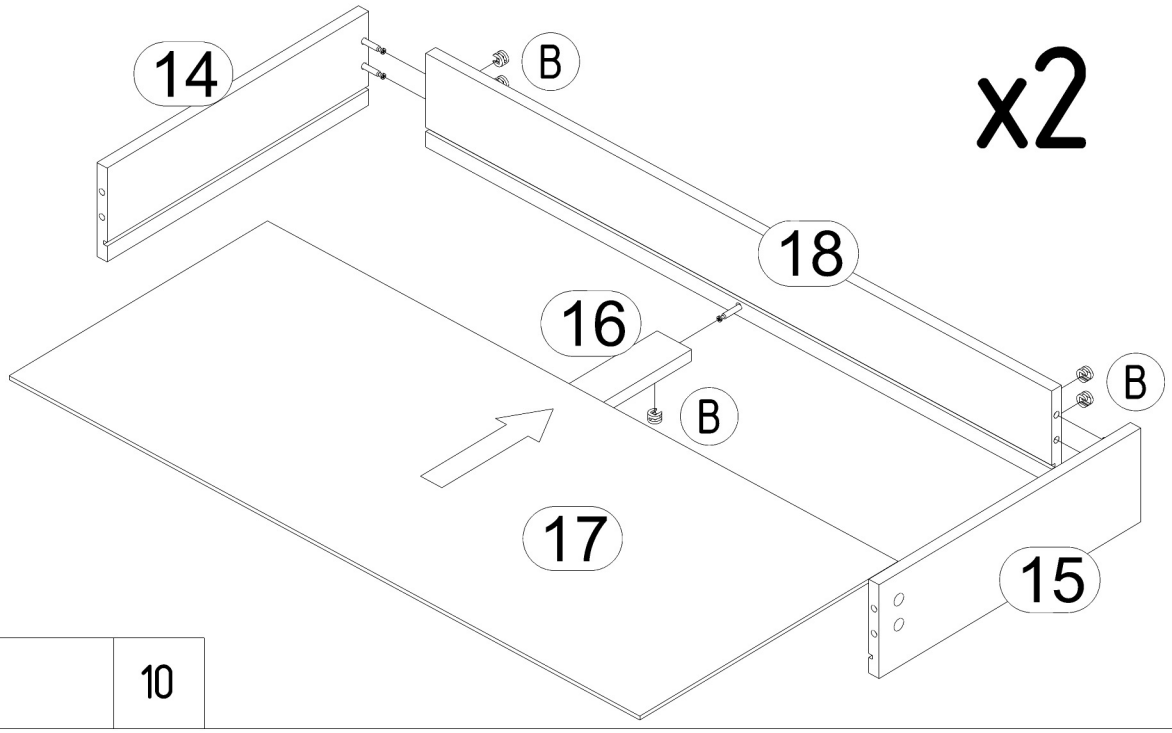STEP 13




B		10

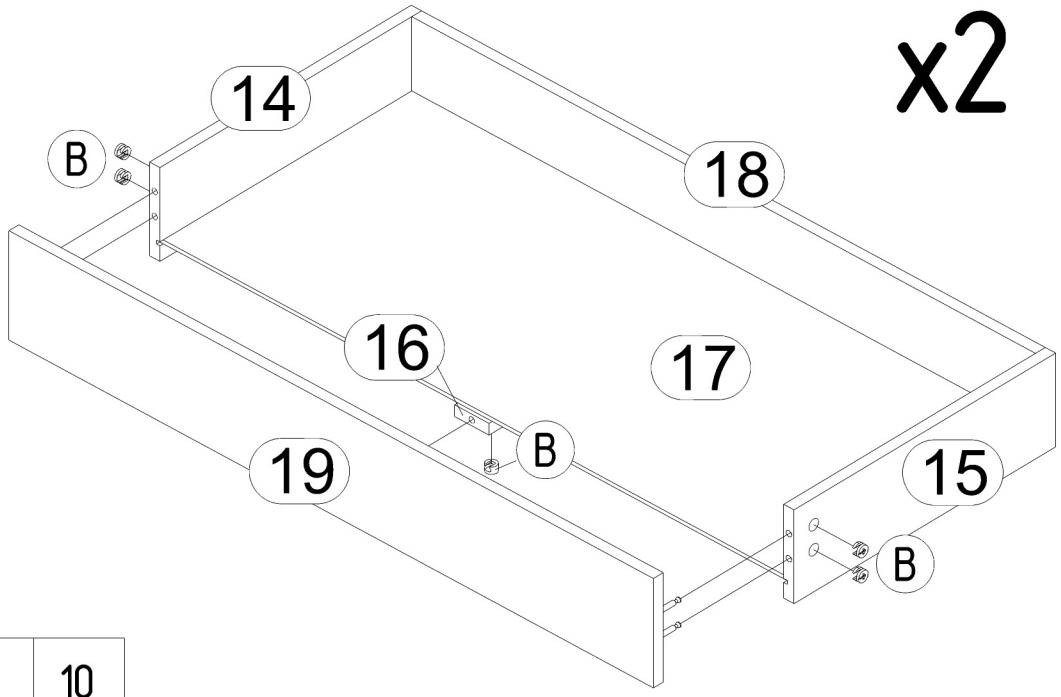STEP 14



B		10

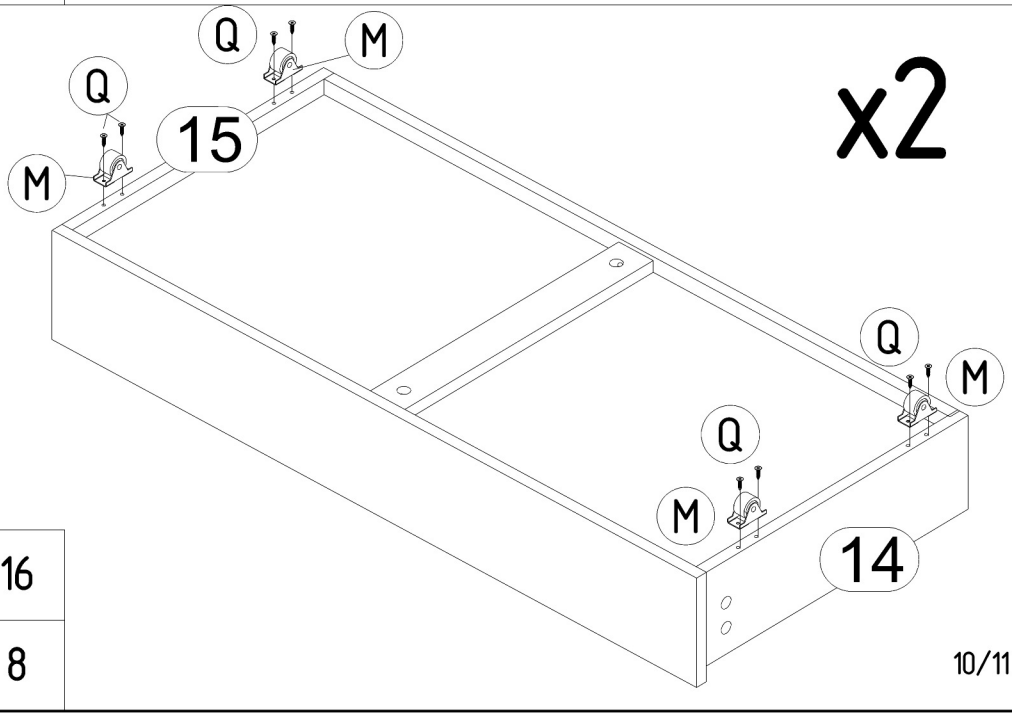STEP 15



Q		Ø3.0*12	16
M			8

All Done !

