

motion
by **OMF**

UPS1420

MODERN MOTION ADJUSTABLE BED BASE

OWNER'S MANUAL



Table of Contents

Safety Precautions.....	1-2
Parts List.....	3
Queen Base Overview.....	4
Control Box Overview.....	5
Installation Guide.....	6
Wireless Remote.....	7
Wireless Remote Pairing.....	8
Position Setting.....	9
Trouble Shooting.....	10
APP.....	11
Warranty Information.....	12-13



Notice – Important Safety Disclaimers

For your safety, please read all the instructions carefully before using this adjustable base. Save these instructions for future reference. This is not a TOY. Ensure all hands and limbs are away from openings and mechanisms at all times.

Attention:

This bed is intended to be used only as described in this manual. Keep the base unplugged before assembly. After assembly, please ensure you connect the bed properly to the power supply to avoid an electric shock or fire. Before cleaning always ensure that the bed is in a flat position with all motors turned off and disconnected from the power source. Always keep the power cord away from heated surfaces.

If the power cord or plug becomes damaged, or if the bed is wet or not working properly, stop using the bed and contact your dealer.

Do not use any accessories/attachments that are not recommended by the manufacturer.

Close supervision is required when the bed is used by or near children, convalescents or disabled persons.

Electrical Safety:

To protect electrical components, the bed should be plugged into a surge protected power supply cord or receptacle.

Warranty Warning:

The control box, motors, and remote (except battery compartments) should not be tampered with. Opening or tampering with these components will void the warranty.

In-Home Use Only:

This bed is designed exclusively for in-home use. It is not designed as a hospital bed, or to meet hospital standards. Do not use this bed with tent type oxygen therapy equipment or near explosive gases.

Safety Precautions

Medical Device Notice:

This bed contains Neodymium magnets, which may interfere with magnetic fields of devices such as pacemakers, ICD'S etc. Some pacemakers may falsely interpret massage vibrations as movement or exercise. The owner of such medical devices should consult with their physician before using this product.

Children and Pets:

This product is designed to be used by an adult. Do not allow children to operate the bed without adult supervision. Immediately dispose of all packing materials as they can pose a smothering risk to children and pets. Injury can occur if children or pets are permitted to play on or under the bed.

Weight Limits:

This product is not rated to support weight exceeding 320 kgs (700 lbs.). This includes bed partners, the mattress and bedding. The bed will structurally support this weight, provided it is evenly distributed. The bed is not designed to support or lift 320 kgs (700 lbs.) in the head or foot sections alone. Exceeding this weight restriction could damage the bed and/or cause injury and will void the warranty.

Motors:

All motors emit a noticeable tone during operation. The volume of this tone is often enhanced in home settings, depending on flooring and acoustics.

Lift motors are not designed to be operated for more than 2 minutes, if the lift motor run over 2 minutes then it needs rest for 18 minutes. Exceeding this will shorten the life of the motor and may void the warranty.

To protect overheating of massage motors, they automatically turn off after 30 minutes of use. Failure to give these motors a 30-minute rest after they turn off, may void the warranty.








FCC Compliance:

FCC Compliance: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. To comply with the FCC RF exposure requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirement and will void warranty.

Radio Frequency: 2.4 GHz

Parts List


Please ensure you have received all the parts listed below before discarding packing materials.

				Part Name	Quantity	
A 	B 	C 		Adjustable Bed Base	1	
			A	Wireless Remote & Batteries	1	
			B	Legs	6	
D 	E 	F 	G 	D	Mattress Retainer Bar	1
				E	Power Supply Box	1
				F	Power Cord	1
				G	SYNC Cabel	1


All parts shown are for reference only and may not resemble parts for this adjustable bed.

Queen Base Overview

1	Head Lift Up/Down Motor	2	Control Box
3	Leg Lift Up/Down Motor	4	LED Underbed Light

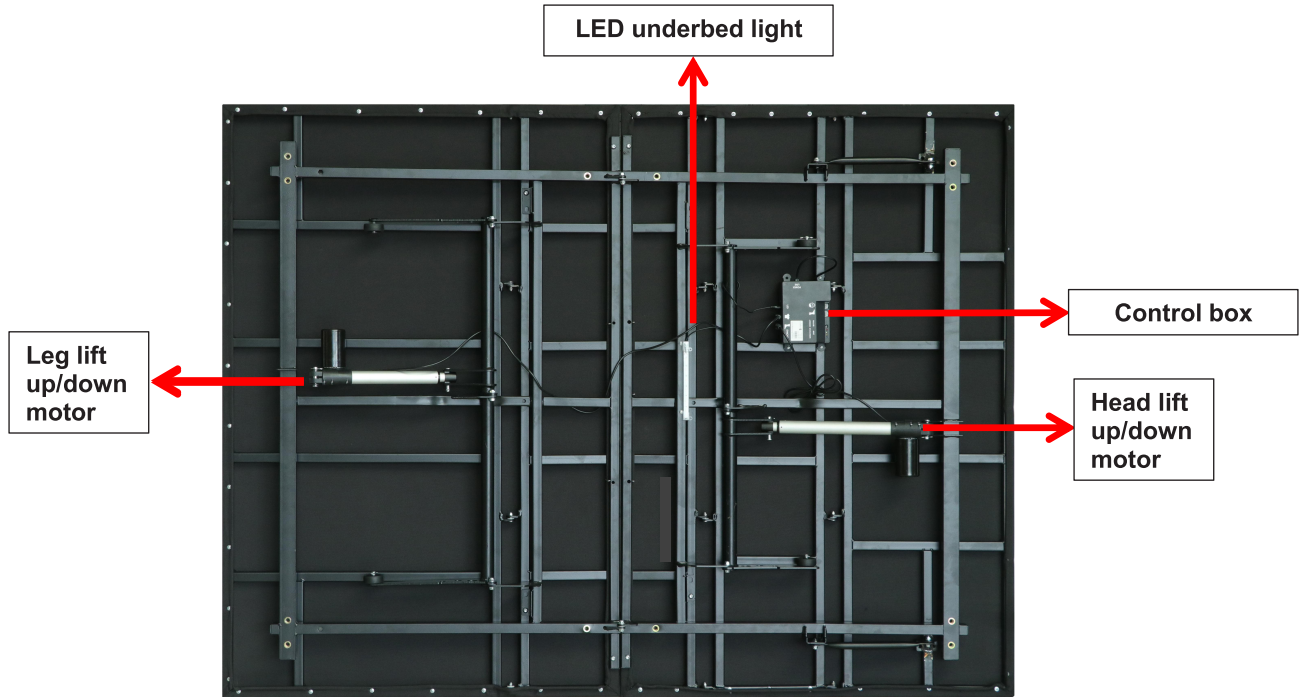


Control Box Overview

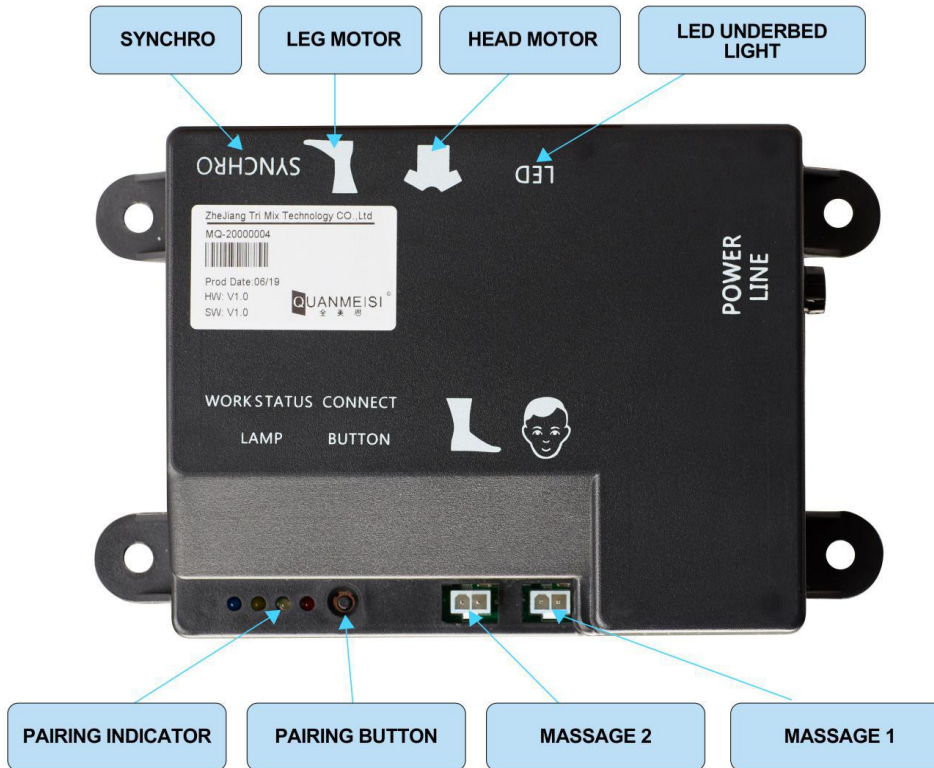

Installation Guide

Step 1: Remove packing materials

- Put the bed in its desired location with the bottom of the cardboard box facing up. Remove the top of the box. Take out all the packing materials and put them aside. Make sure you keep sharp objects that might puncture the bed out of the way.



Step 2: Remove the base from the box

- Install the 6 legs. Each leg comes with 7 pieces (2-1", 4-2", and 1-3". You can adjust your base height anywhere from 5" to 13". Keeping the base facing upward, tighten the feet securely by hand.



Step 3: Turn the bed over carefully

- With the help of another person carefully turn over the bed and remove the rest of the cardboard box. Do not lay the bed on its side to prevent damage to the USB ports, fabric, or legs.

Step 4: Connect the power supply box

- To prevent damage to the Power Supply Box (E) please ensure that it's not obstructed in any way by the adjustable base or headboard.




- Plug the power cord into the Power Supply Box as shown.

After electrifying the bed, please wait 30 seconds before using the remote control to control the bed, because the control box is in pair mode within 30 seconds after electrifying the bed.



Wireless Remote

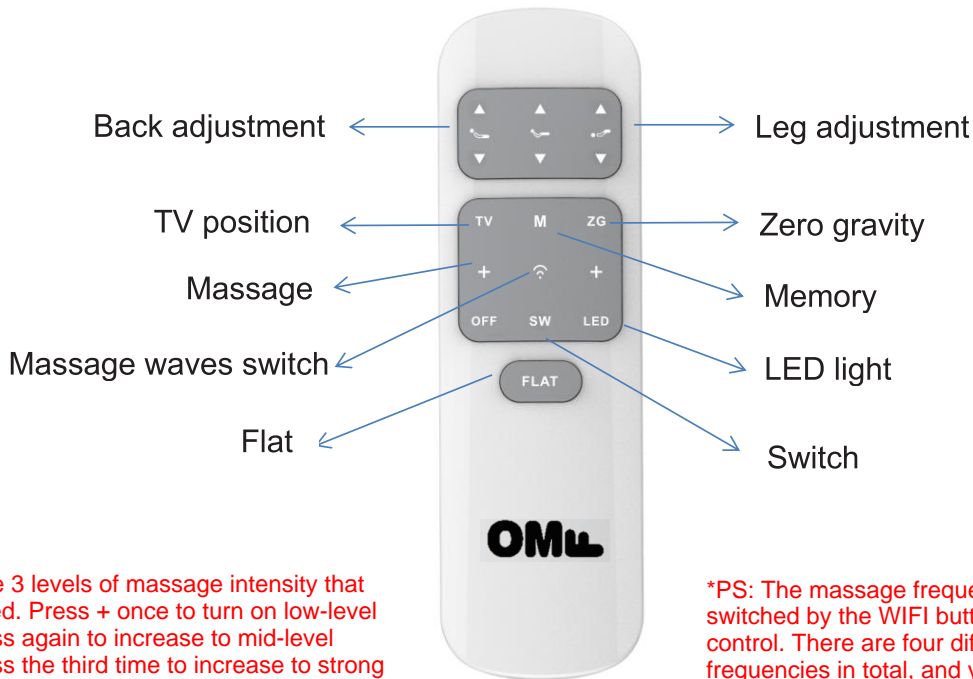

*PS: There are 3 levels of massage intensity that can be adjusted. Press + once to turn on low-level massage, press again to increase to mid-level massage, press the third time to increase to strong massage, and press the fourth time to turn off massage. You can also press the OFF button in the lower left corner to turn off the massage.

*PS: The massage frequency can be switched by the WIFI button on the remote control. There are four different massage frequencies in total, and you can switch by pressing the button once.

Wireless Remote Pairing


The remote control has been paired before leaving the factory. This content is used when a new remote control or control box is replaced.

Step 1:

Push in on the bottom of the remote to release the battery cartridge and install three AAA batteries into the remote battery compartment. Push firmly to close.

Step 2:

Plug the base into a power source and press the Pairing Button on the control box until the Pairing Indicator Lamp is flashing (white third light).

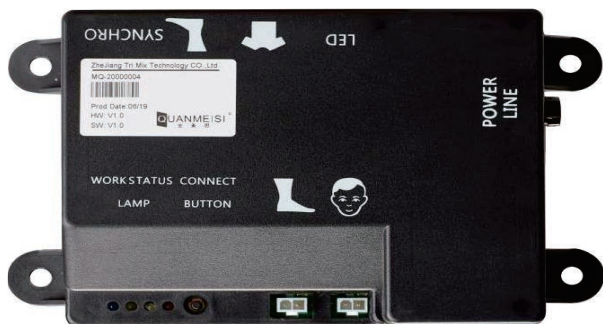

Pairing Indicator Lamp (white third light)

Pairing Program Button

Step 3:

Press "SWITCH" until the backlit LED light on the remote flashes. Then release "SWITCH" and press "HEAD UP". Don't release "HEAD UP" until the backlit LED light is lit, and the remote is paired.

Second, Press "HEAD UP". Don't release until the backlit LED light is lit, and the remote is paired.

First, Press the "SWITCH" button on the remote until the backlit LED light flashes and then release.



When the Pairing Program Button on the control box and the backlight LED on the remote stop flashing, and the buzzer on the control box has a "DI" sound, pairing is completed. If the pairing fails, repeat the process again.

Position Setting

The 'SW' button work with ZG (Zero Gravity), TV position, and Memory buttons.

'SW' + TV position button:

Hold the SW for 3 seconds until the backlight appears, then press the TV button: Set your own TV position for memory mode.

'SW' + ZG button:

Hold the SW for 3 seconds until the backlight appears, then press the ZG button: Set your own Zero gravity position for memory mode.

'SW' + M button:

Hold the SW for 3 seconds until the backlight appears, then press the M button: Set your own Memory position for memory mode.



SYNC :

Step 1: Insert the sync line into the corresponding sync line interface on the control box and connect the two control boxes.

Step 2: Holding the ' SW' button on the remote for 3s until the backlight flashing.

Step 3: Holding the button until the backlight stop flashing. Now, you are completed SYNC setup, and you can using one remote to controlling 2 beds.




Exit SYNC mode;

Holding the " SW" button one the remote for 3s until the backlight flashing. Holding the ' Left Massage +' button until the backlight light off.






Trouble Shooting

If you have an issue with your adjustable bed, please read the following for a possible solution.
If there appears to be no fix, please contact your dealer.

Symptom	Malfunction	Solution
Adjustable bed function does not work	No power input	Check the connection of the power cord
	Power cord or control line is damaged	Replace the power cord or control line
	Wireless remote battery is dead	Replace the wireless remote battery
	Wireless remote isn't working	Replace the wireless remote
	One of the motors is not working	Replace the motor
Excessive motor noise	Motor wear or damage	Replace the motor
The adjustable bed function runs slow	The adjustable bed is overloaded	Reduce the weight of the load on the bed
Unable to pair	Pairing error	Check to see if the pairing light on the control box is blinking. Follow the pairing instructions if it still cannot be paired, unplug, plugin and try it again.
The bed does not respond after sending it an action command	The control box most likely did not receive the command	After confirming that the wireless remote button is pressed, a green or yellow light should be flashing on the control box. If it's not, please un-plug the bed, plug it back in, and try it again.
The red work light flashes on the control box. After sending the action command, the corresponding part will stop Automatically after moving	The control box detected a fault	Set to "FLAT" and contact your dealer.
Nothing seems to be working	Electronic components may require resetting	Unplug the bed for an hour and then plug it back in. If this fails to solve the issue, please call your dealer

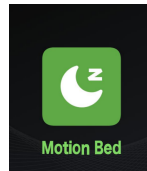

Please download the 'Motion Bed' on App store (IOS) or Google store (Android)

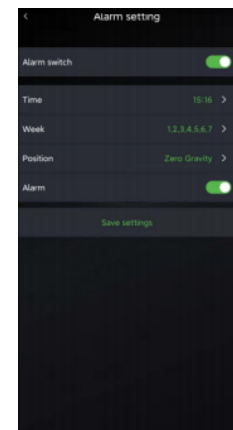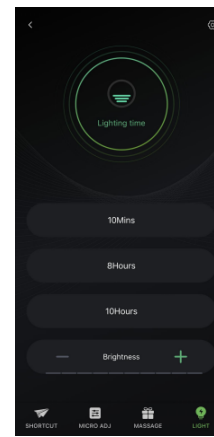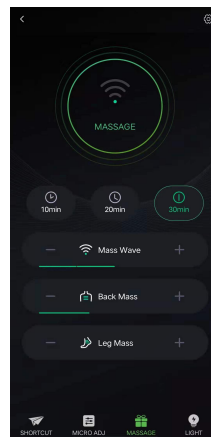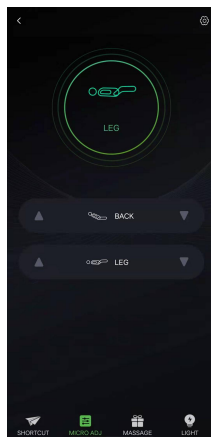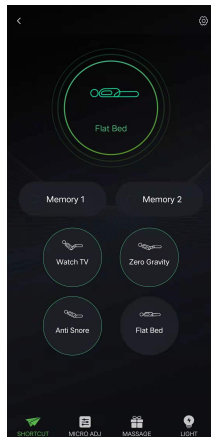

The mobile app can completely replace the remote control to operate the bed. You can adjust the intensity and frequency of massage in the app, time the massage function, adjust the brightness of the lights under the bed through the app, and time the LED lights. You can set an alarm clock, and you can customize a position to wake you up, and you can also choose whether to turn on the massage function when you wake up.

Warranty Information

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Changed your mind?

We understand that choosing the right product is not easy. Sometimes things will be too big, too small or simply aren't right. At OMF you can shop with confidence, you can simply return any purchase to the store you bought it from within 7 days of purchase and exchange it for another item. as long as:

- You have clear proof of purchase, such as a receipt.
- The product and its packaging are in original condition, including any manuals and accessories; and
- The product is not an excluded product (see list below).
- the delivery fee will not be refunded for change of mind returns. If you request us to collect the goods from your premises, we will also charge a pickup fee. We will confirm the amount of this pickup fee before your pickup is confirmed.

You will be provided with tools to package items in accordance with health guidelines, to allow for the pickup to take place. We do not offer "change of mind refund" on the following products:

- Pillows
- Mattresses

Faulty or damaged products?

We ask that you check any product delivered to you to determine if it is damaged. If a product is damaged at the time of delivery, then you should refuse to accept delivery of that product and notify the Customer Service team. If you notice damage to a product after delivery, you should notify us within 7 days of delivery. If you wish to obtain a refund rather than a replacement, we will only refund the delivery fee if the products are determined (after assessment) to be faulty and the fault did not arise through any misuse, abnormal use or negligent use of the products by you.